


# *The Finial Company*

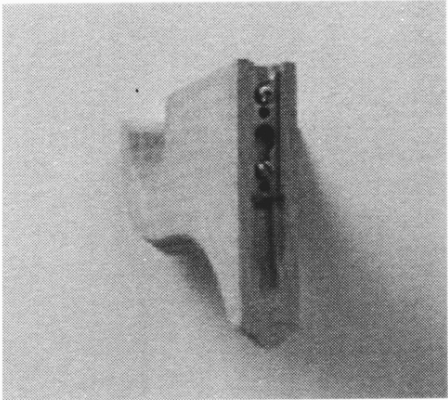


## **STEP 1**

LOOSEN SCREWS 1/4 TURN.

REMOVE METAL BRACKET FROM  
BACK OF POLE BRACKET.


Ceiling

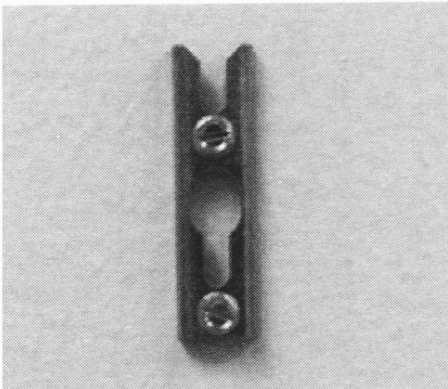

## **STEP 2**

MOUNT THE METAL BRACKET TO  
THE WALL.

Floor

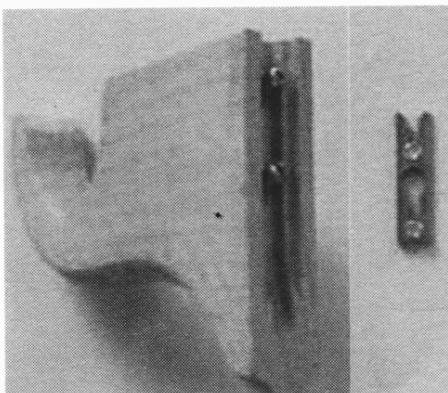

## **STEP 3**

HANG POLE BRACKET ONTO THE  
METAL BRACKET, PLACING THE  
SCREWS INTO THE KEYHOLE  
SLOTS.